

INSTRUCTION MANUAL

SKYRC



CS60

BRUSHLESS SENSOR ESC



For 1/12 & 1/10 Scale Car
Support Both Sensor or Sensor-less Brushless Motor

INTRODUCTION

Thank you for purchasing Cheetah 1/10 CS60 60A Sensored ESC from SKYRC TECHNOLOGY CO.,LTD. Please read the Instruction Manual thoroughly before you use the product. These operating instructions are designed to ensure that you quickly become familiar with its features and functions and make full use of this product.

SAFETY NOTE

- It is not a toy and suitable for users older than 14 years old.
- Never allow water, moisture, oil or other foreign materials to get inside ESC, motor, or on the PC Boards. It may damage the ESC completely.
- Never disassemble the ESC and modify the components on the PC Boards.
- Suggest using the original wires and connectors which are packed in the box.
- Never solder one part for more than 5 seconds as some components will get damaged by high temperature.
- Never run the ESC w/o load at full throttle and it may damage the bearings and other moving parts.
- Please make sure the location where to fix the ESC has good airflow ventilating so that the heat could dissipate quickly.
- To avoid short circuit, please keep the ESC connectors far away from other metal parts.
- Never connect the battery in polarity in reverse.
- Please remove the pinion gear before performing calibration and programming functions with this system. Please keep your hands, hair, cloth, clear from the gear train and wheels of an armed high performance
- Before you switch on the ESC, please make sure all the cables are well solder with the connectors (It is easy to get loose when running) . What's more, make sure the cables not touch the moving parts.
- Electronic motor timing will increase the temperatures of ESC and brushless motor. Use extreme caution when setting up and testing your application to avoid overloading and overheating.
- Incorrect timing setting may cause permanent damage to the ESC and motors. Please choose proper ratio and timing setting according to motor's instruction.

- To avoid signal interference, please always turn on the transmitter first THEN turn on the speed control. Do the opposite when powering it off.
- Never use faulty accessories, e.g. motor which may damage the ESC. Always insulate exposed wiring with heat shrink tubing or electrical tape to prevent short circuits, which can damage ESC too.
- Always disconnect the battery pack from the speed control when not in use to avoid short circuits and possible fire hazard. When the ESC is switched off, there is still small current and it may cause over discharge of the battery after some time.
- The ESC can support 4-9 cells NiMH or 2-3 cells LiPo battery.

Note: We will not be responsible for any damage caused by non-compliance with above instruction.

PREPARATION

1) Plan Speed Control Placement

Choose a location for the speed control that is protected from debris. To prevent radio interference, place the speed control as far away from the radio receiver as possible and keep the power wires as short as possible. Select a location that has good airflow ventilating. If the ESC gets air flow, it will run cooler; and that means it will be more efficient.

2) Mount Speed Control in Vehicle

Use double-sided tape to mount the speed control in vehicle (do not use CA glue).

3) Soldering


Cut the ESC's BLUE, YELLOW & ORANGE silicone motor power wires to the desired length and strip about 3.2mm-6.35mm (1/8"-1/4") of insulation from the end of each wire. "Pre-tin" the wire by heating the end and applying solder until it is thoroughly covered.

CAUTION: By very careful not to splash yourself with hot solder.

Place the ESC's BLUE Phase 'A' motor wire onto motor's 'A' solder tab and solder. Use soldering iron to apply heat to exposed wire; begin adding solder to tip of soldering iron and wire. Add just enough solder to form a clean and continuous joint from the plated area of the solder tab up onto the wire. Solder the ESC's YELLOW Phase 'B' motor wire to the motor's 'B' solder tab and Solder the ESC's ORANGE Phase 'C' motor wire to motor's 'C' solder tab.

CONNECTION

- 1) Connect the motor sensor harness to ESC. Insert the 6 pin connector on the end of the motor's sensor wires into ESC's sensor harness socket.
- 2) Connect Throttle lead to ESC and other end to the Receiver (Throttle Channel, Ch2)
- 3) Connect the motor and the ESC.
- 4) Connect ESC to batter pack.

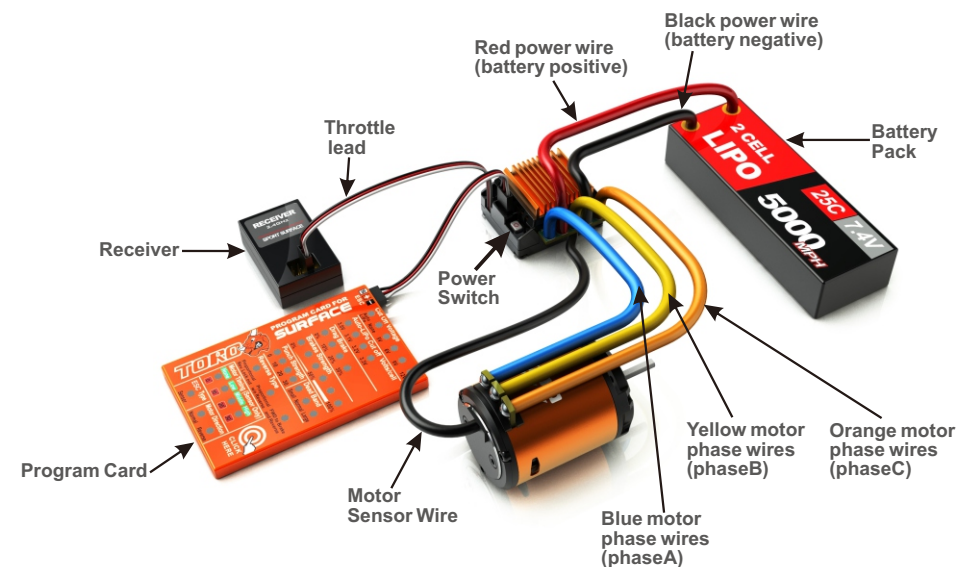

ESC CALIBRATION

Calibration is necessary for the first use of the ESC, or whenever used with a new/different transmitter. Individual transmitter's signals for full throttle, full brake and neutral vary. You must calibrate your ESC so that it will operate more effectively with your transmitter.

How to calibrate the ESC?

- ESC switch OFF.
- Connect the ESC to the battery and the motor.
- Turn on the transmitter.
- Press and hold the ESC switch for few seconds, the motor will ring long beep once. After that, the red LED will blink the motor will ring like beep-beep-beep... in a row which indicates it is time to set the neutral position, full throttle and full brake one by one. You could release the ESC switch now.
- Keep the throttle trigger in neutral position, press the ESC switch once, the green LED will blink once then extinguish and the motor will ring beep once which indicates the neutral position has been set.
- Hold full throttle and press the ESC switch once, the green LED will blink twice then extinguish and the motor will ring twice like beep-beep which indicates the full throttle has been set.
- Move the throttle trigger to full brake and hold full brake, press the ESC switch once, the green LED will blink three times then extinguish and the motor will ring three times like beep-beep-beep which indicates the full brake has been set.
- After the calibration is finished, keep the throttle in neutral position, the red LED will stay ON, the ESC and the motor is ready to work.



ESC ON/OFF AND LED INDICATOR

1. ESC ON/OFF: When the ESC is OFF, press the switch once, the red LED will stay on (The factory default motor turbo timing is 10°), then the ESC is ready to work. When the ESC is on, press and hold the switch for 1 second, the LED will extinguish and the ESC is OFF.

CAUTION:

- 1: After running at full load, the ESC will be very hot. In this case, please turn off the ESC after it cools down.
- 2: When the motor is running, the ESC can't be powered off by pressing the switch; when the motor stops working, the ESC can be powered off. In an emergency, please disconnect the battery to power off the ESC.
- 3: When the motor is running, keep the trigger of the transmitter to full brake for 4 seconds, the ESC will be off.

2. Explanation of LED Indicator

The throttle trigger is in neutral position	Red LED is blinking (zero timing)
The throttle trigger is in neutral position	Red LED stays on (Motor turbo timing is on)
The motor is running while the throttle trigger doesn't reach to the highest throttle/brake position	Green LED is blinking.
The throttle trigger is at the highest throttle/brake position.	Green LED stays ON

ESC PROGRAMMING

Programming Card

Programming Card allows you to modify the most commonly used settings in your Cheetah 1/10 CS60 60A Sensored ESC controller all at the touch of a single button. No computer needed. Simply connect the Programming Card to the throttle lead of the controller and power the programming card as described below. Click the button to scroll through and change the indicated settings. All the settings will show on the programming card at once. Can't get any easier!



Instruction for Program Card

- Turn off the ESC.
- Connect the lead from program card's 3 pins connector to the program interface pins of the ESC. (Please refer ESC's Instruction Manual for details. The connection methods for different ESC may varies)
- Turn on the ESC to apply power to both ESC and Program Card.
- All the current settings will be displayed on the correspond LEDs.
- Press and release button to move between settings.
- Press and hold button to change the value for that setting.
- Turn off the ESC and disconnect lead from Program Card.

Programmable Items and Description

Program Item	Description	Factory Default Setting
Cut Off Voltage	Auto LiPo	★
	None	
	5V	
	6V	
	9V	
	12V	
Auto-Lipo Cut Off Volts/CELL	3.0V	
	3.1V	
	3.2V	★
	3.3V	
Drag Brake	0%-30% (in 5% increment)	10%
Brakes Strength	0%-100% (in 10% increment)	80%
Punch Strength	0-30 (in 5 increment)	10
Dead Band	Small	
	Normal	★
	Large	
Reverse Type	Proportional Rev. Lock Out	
	Proportional w/o Reverse	★
	FWD to Brake and Reverse	
Moto Timing (Sensor Only)	0°-30° (in 5° increment)	10°
ESC Type Setting	ESC Sensor	Auto
Moto Direction	Normal	★
	Reverse	

SPECIFICATION

Constant/Burst Current	60A/380A
Motor Compatible	Brushless Sensor & Sensorless ESC
Car Compatible	1/10 and 1/12 Buggy and Touring Car
Motor Limits	5-6S NiMH or 2S LiPo--≥8.5T(1/10 Touring Car), ≥10.5T(1/10 Buggy)
	8-9S NiMH or 3S LiPo--≥10.5T(1/10 Touring Car), ≥13.5T(1/10 Buggy)
Resistance	0.0007ohm
Battery Cell Count	2-3S LiPo or 4-9S NiMH
BEC Output	6V@3A
Size	39x38x20mm (LxWxH)
Weight	30g (w/o wire)
FAN	8V@0.2A , Max 12.6V

WARRANTY AND SERVICE

The Cheetah 1/10 CS60 60A Sensored ESC is guaranteed to be free from defects in materials or workmanship for a period of 90 DAYS from the original date of purchase (verified by dated, itemized sales receipt). Warranty does not cover incorrect installation, components worn by use, damage to case or exposed circuit boards, damage due to timing, damage from using more than 3 LiPo cells input voltage, cross-connection of battery/motor power wires, overheating solder tabs, reverse voltage application, improper use or installation of external BEC, damage resulting from thermal overload or short-circuiting motor, damage from incorrect installation of FET servo or receiver battery pack, tampering with internal electronics, allowing water, moisture, or any other foreign material to enter ESC or get onto the PC board, incorrect installation/wiring of input plug plastic, allowing exposed wiring or solder tabs to short-circuit, or any damage caused by a crash, flooding or natural disaster. Because SKYRC has no control over the connection & use of the speed control or other related electronics, no liability may be assumed nor will be accepted for any damage resulting from the use of this product. Every SKYRC speed control & motor is thoroughly tested & cycled before leaving our facility and is, therefore, considered operational. By the act of connecting/operating speed control, user accepts all resulting liability. In no case shall our liability exceed the product's original cost. We reserve the right to modify warranty provisions without notice. This product is not intended for use by children under 14 years of age without the strict supervision of an adult. Use of this product in an uncontrolled manner may result in physical damage or injuries take extra care when operating any remote control.

Note:

1. The warranty service is valid in China mainland only.
2. If you need warranty service overseas, please contact your dealer in the first instance, who is responsible for processing guarantee claims overseas. Due to high shipping cost, complicated custom clearance progress to import to China and limited resource of SkyRC factory, please understand SkyRC can't provide warranty service to end customers overseas directly.
3. If you have any questions which is not mentioned in the manual, please feel tree to send email to info@skysrc.cn

SKYRC

Manufactured by
SKYRC TECHNOLOGY CO., LTD.
www.skysrc.com

© 2014 SkyRC Technology Co., Ltd. All Rights Reserved.
7504-0369-04 Ver 1.4

